

**Dear customers,**

You hörbert has additional electronics that can switch it off after an adjustable time. The automatic shutdown changes the behaviour of your hörbert. We would like to point out two significant changes in the following:

➤ **Function and display of the on/off toggle switch:**

Without automatic shutdown, hörbert keeps on playing when the toggle switch is in the ON, i.e. when it is tilted to the front of hörbert.

With the automatic shutdown hörbert can be turned off even though its toggle switch is in the ON position. Please explain to your child that, after automatic shutdown, hörbert will not play again until the toggle switch is **switched off and then on** again.

➤ **Behaviour when batteries or rechargeable batteries run out:**

The automatic shutdown also includes rechargeable battery protection. Without this additional electronics, it becomes quieter and "croaks" when the batteries or rechargeable batteries run out. This indicates that it is time to change the battery/rechargeable batteries. This will continue until the batteries no longer supply electricity.

The additional electronics interrupts the current song when the batteries or rechargeable batteries are empty and restarts it from the beginning. This behaviour repeats itself again and again in ever shorter intervals as a signal for empty cells. Then please insert 4 new batteries or 4 full rechargeable batteries.

Note for customers who convert their hörbert and install the automatic shutdown at home:

**The installation instructions and a link to the instruction video can be found under:**

[www.hoerbert.com/automatic-shutdown](http://www.hoerbert.com/automatic-shutdown)

❖ **Please take 2 minutes to let us know your experience with the automatic shutdown:**

Here you will find the online questionnaire. Thank you for your support!

<https://www.hoerbert.com/shutdown-questionnaire>


Our entire team wishes you a lot of fun with your hörbert!

**Settings of the automatic shutdown**

Setting at delivery

With the automatic shutdown, the playing time can be set in six stages. We deliver the additional electronics with the time setting "infinite".

In this setting, switch no. 6 is in position ON (push down). In this position hörbert will **not** be switched off automatically.

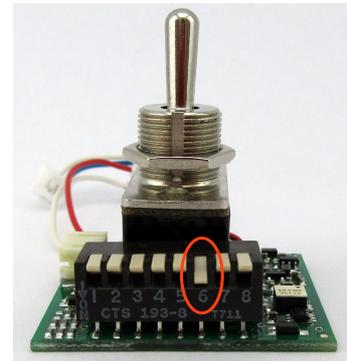

Further settings


To select the desired playing time, set one of the switches 1 to 6 according to the following table.

If the switch is pressed down, the corresponding playing time is activated.

switch 1	switch 2	switch 3	switch 4	switch 5	switch 6	switch 7	duration in minutes
<b>ON</b>	OFF	OFF	OFF	OFF	OFF	OFF	15-20
OFF	<b>ON</b>	OFF	OFF	OFF	OFF	OFF	30-35
OFF	OFF	<b>ON</b>	OFF	OFF	OFF	OFF	60-65
OFF	OFF	OFF	<b>ON</b>	OFF	OFF	OFF	90-95
OFF	OFF	OFF	OFF	<b>ON</b>	OFF	OFF	120-125
OFF	OFF	OFF	OFF	OFF	<b>ON</b>	OFF	infinite

**Notes on the settings of the playing time:**

- a) The setting of the playing time is only valid after the next power-up, you cannot shorten or extend the time during playback.  
Please switch off your hörbert first (toggle switch to position OFF), in order to set the playing time to avoid an undefined state.
- b) If several of the switches 1-5 are activated simultaneously, the playing time is undefined and hörbert switches off after an indefinite period of time.

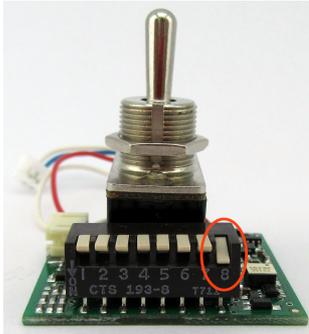**Protection settings for rechargeable batteries**

For optimum protection of your rechargeable or non-rechargeable batteries, you can adjust the protective circuitry: rechargeable batteries must be prevented from deep-discharging, batteries can be drained more heavily, an early battery leakage can sometimes be postponed.

Do you use **rechargeable batteries**? (Recommended!)  
Then **set switch 8 to ON** (as shown in the picture on the left)

Do you use hörbert with **alkaline batteries**?  
Then **set switch 8 to OFF**.

**Note: Please remove empty batteries or rechargeable batteries from the device immediately.** If your hörbert is not to be used for a longer period of time (e. g. several days at a time), you should always remove the batteries or rechargeable batteries to prevent damage to your hörbert.

**Service**

Please do not hesitate to contact us if you have any questions:  
Use the contact form at [www.hoerbert.com/service](http://www.hoerbert.com/service)  
By email: [service@winzki.de](mailto:service@winzki.de)  
By phone: +49 (0)7022 506420

**Disposal of electrical appliances**

Electrical appliances do not belong in household waste!



Devices marked with this symbol must not be disposed of with the household waste.  
Our WEEE registration number is: DE99310248

You are legally obliged to return old equipment to be reused or recycled. After usage, you can return them to our sales centre, a municipal collection point, or even at the shop yourself.

You can return used hörberts to: WINZKI GmbH & Co. KG, Benzstr. 2, 72636 Frickenhausen, Germany

This option is limited to old devices which we sell or have sold in our range, and to the quantity which end users generally dispose of. Returning the device in person incurs no charge. If you choose to return it by post, you pay the postage costs. For further information on recycling, please contact the competent authority.

**WINZKI**

hörbert ist ein Produkt der WINZKI GmbH & Co. KG, Benzstr. 2, 72636 Frickenhausen, Germany

**Der MP3-Player für Kinder.**  
Natürlich aus Holz. Made in Germany.

hörbert  
mein Hörspieler