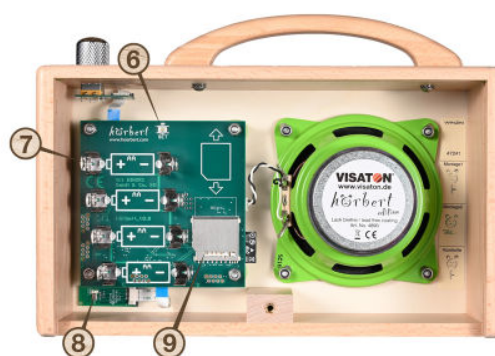 


Herzlichen Glückwunsch zu Ihrem neuen hörbert!

In order to record your own songs and radio plays onto hörbert's memory card, to set up the storage of recordings on one or more playlists and to set up the Internet radio, you need the hörbert software. The version 3.x is needed for the new hörbert model with electronics version 2.0 of October 2021. The latest version of this software can be downloaded free of charge from our service page under Software Downloads and Questions about Recording: <https://www.hoerbert.com/service/>. Because hörbert can be replayed, it "grows" with your child and becomes a loyal companion throughout childhood and beyond.

Below you will find detailed instructions for the hörbert software.

Any questions? Your hörbert service team will be happy to help you at any time at service@winzki.de. The entire hörbert team wishes you much joy with your hörbert!



Inhaltsverzeichnis

The hörbert software	1
System requirements	1
Installing the hörbert software	2
Use of the hörbert software	2
Query according to the hörbert model	2
Read in card	2
Edit a playlist.....	2
Add files to a playlist	3
Move a file.....	3
Deleting a track from a playlist.....	3
Confirm the changes.....	3
Scissor function:.....	3
Prelisten to tracks.....	3
Insert silence.....	3
Insert Internet Radio URL.....	3
The menu of the hörbert software	4

Edit:.....	4
View	4
Configure WiFi connections.....	4
Print table of contents.....	4
Create data backup	4
Restore data backup.....	4
Advanced functions	4
Save recordings via microphone, Bluetooth or	
Internet radio	4
Allow microphone recording.....	4
Bluetooth stream recordings	4
Internet radio station recordings.....	4
Settings for Internet radio via WiFi	4
Setting up WLAN or WiFi settings.....	4
Playback of a microphone recording	5
Playback of Internet radio recordings	5

The hörbert software

The hörbert software is a computer program for transferring music and audio plays from your computer or from CDs to hörbert's memory card. The hörbert software takes over the function of the playlist manager, i.e. it helps you to assign the audio contents to hörbert's selection buttons (2).

In addition, the software can copy content from audio CDs directly to hörbert's memory card.

For hörberts without a toggle switch - from October 2021 - the hörbert software contains new functions that are no longer compatible with the hörbert 2011 model.

Therefore, when the software is started, the user is first asked which hörbert model he or she owns. With toggle switch = hörbert 2011. Please note that older memory cards work in new hörberts, but not the other way round.

System requirements

- PC or Mac (Intel)
- Operating system: Windows 10 or higher, or Mac OS X from version 10.14. or Linux from 16.0.4 You are using an older Windows or macOS operating system? Please contact service@winzki.de for further information and help.
- SD card reader, built-in or connected to a USB port
- Screen resolution of at least 1024x768 pixels
- At least 8GB free hard disk space
- At least 4GB RAM

Installing the hörbert software

You can find the latest installation files for the hörbert software on the Internet for free download at:

<https://www.hoerbert.com/service>

Download the hörbert software programme and install the app in your programmes on the computer. You may - depending on your system - be asked for an administration password so that the hörbert software can be installed on your computer.

Simply follow the instructions of the installer and your operating system. With the **macOS** installer you simply have to drag the bear symbol in the direction of the arrow onto the programmes, then the installation will start.

Under **Windows**, start the installation by double-clicking on the previously downloaded installation file called "hoerbert.exe".

After successful installation you will find in your this symbol in your programmes:



Use of the hörbert software

The hörbert software helps you to define the contents of the 9 playlists and their order within the playlist. Start the hörbert software via the hörbert icon on your desktop, or from the Windows start menu under "Programms->hörbert->hoerbert". Under Mac OS X, start the hoerbert.app in the folder: "Applications->hoerbert".

Query according to the hörbert model

First, the software asks for which hörbert model the memory card should be recorded. Memory cards that have been recorded and configured for the new hörbert model (release October 2021) will not work in hörberts with the older electronics of the hörbert 2011 model.

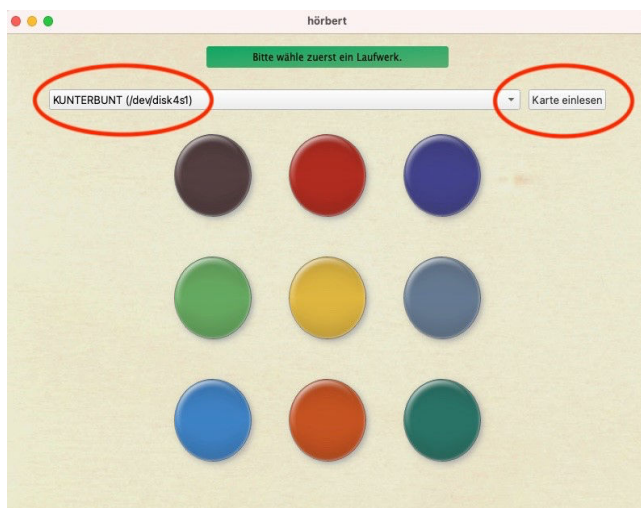 


Figure 1 – start window

Read in card

If you have not already done so, insert the hörbert memory card into the SD card slot (9) of your computer. The hörbert software recognises the memory card and displays its name. In Figure 1, the card name is "KUNTERBUNT". Then click on the "Read in card" button to the right of it.

If you have several removable media connected to your computer and the drive display bar shows another drive and not the memory card, you can find and select the memory card using the small black triangle to the right of it. Click on the button "Read card" to the right of the name of the memory card. Now the number of titles per button is displayed in the form of numbers.

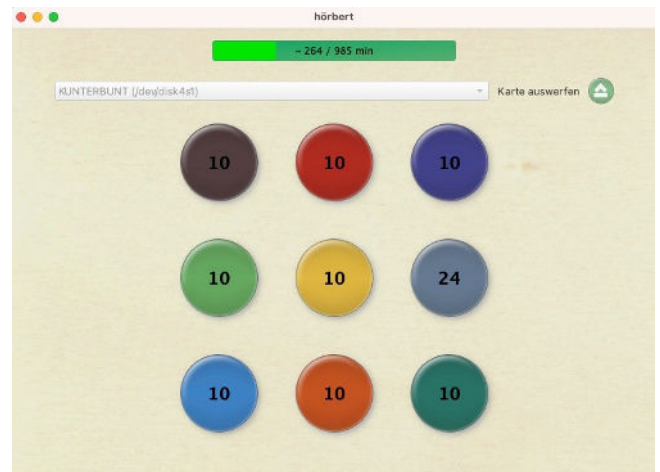 


Figure 2 - Fill level and number of files

Edit a playlist

In figure 2 above, you can see how many titles are already deposited behind each of the coloured buttons. Click on one of the coloured button symbols to open the playlist behind it.

Now you can add or remove files in the selected playlist or determine the order.



Figure 3 - Content window - for hörbert 2011

Add files to a playlist

Use the plus symbol in the middle to add new titles to the list. This opens a file window of your operating system, which you can use to search for and select files as usual. Alternatively, you can drag files or iTunes tracks from the iTunes library into the playlist window.

Move a file

Within the playlist, you can change the order of the titles by clicking-and-dragging with the mouse.

Deleting a track from a playlist

If you click on a title, it is marked and can be removed from the list with the minus symbol.

Confirm the changes

When you have finished editing a playlist, confirm this by clicking on the green tick at the top right of the window. The hörbert software now saves the changes to your card in the background and displays a progress percentage on the button for the playlist. You can continue editing the next playlist in parallel by clicking on the next button colour. If you click on the white cross in the red circle at the top right of the window, your changes in the playlist are discarded and the content window closes.

Attention. Ejecting the card is important. When you have finished editing all the coloured buttons, please be sure to eject the memory card properly using the eject button in the hörbert software at the top right of the start window. Wait for the security message before disconnecting the card from the computer.



Figure 4 - Eject Button

Attention! Do not delete the original files from your computer after transferring them, as they cannot be restored from the files copied to hörbert.

Scissor function:

You can have particularly long titles split automatically if you place the tick next to the scissors. If you click 1 x in the box next to the scissors, the file is divided at a suitable silent point, if you click 2 x, the file is divided into a 3-minute section.

Other functions on this page:Prelisten to tracks:

You can listen to tracks by highlighting a track and then pressing the space bar.

Insert silence:

If you want to insert a longer silence between two tracks, select the silence duration in the top left of the content window of the playlist and then click on the plus symbol next to the silence. This inserts the silence into the playlist. You can move the silence up or down with the mouse like other files.

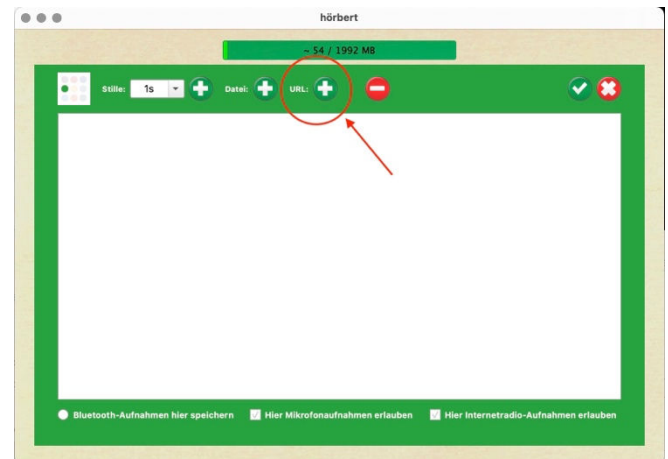 
Insert Internet Radio URL:

Figure 5 - Insert URL 1

Click on the plus to the right of URL in the content window. With this function you insert an address of an Internet radio station or podcast instead of a file.

The following stream formats are possible: mp3, aac, pls or m3u streams.

Sometimes the stream is also encrypted, in which case you must add https://....verwenden instead of "http" at the beginning.

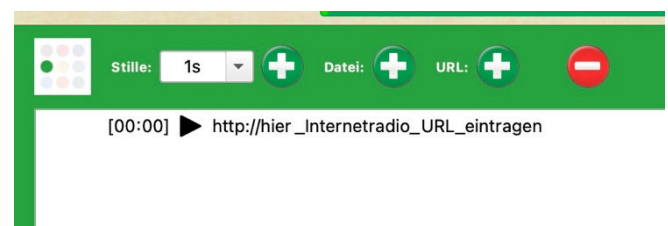 


Figure 6 - Insert URL 2

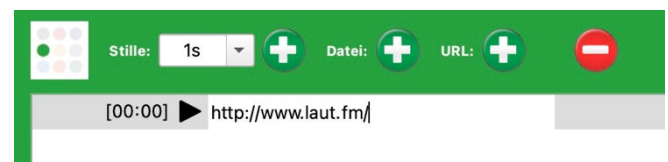 


Figure 7 - Example Internet Radio URL

The menu of the hörbert software

The hörbert software offers further functions via the menu bar at the top of the software window:

Edit:

If you have clicked on one of the coloured playlists with the mouse and thus opened the content window of the playlist, you can do the following via "Edit":

- Add a title. This opens the file system of your computer, which you can use to search for and select a title.
- Remove a title. To do this, one or more files in the playlist must have been selected beforehand.
- move one or more titles to another button (= another playlist). To do this, one or more files must have been selected beforehand.

View

opens a dialogue in which you can switch to dark mode and define the display of playlist columns in the content window. In addition, you can select the audiobook model for which you want to edit the inserted memory card here.

Extras

Configure WiFi connections

Here you can enter the name of your home WLAN and other WLANs and the corresponding password.

Print table of contents

With this command, the hörbert software creates a current table of contents of the memory card and displays it on the screen. It can then be saved or printed out.

Create data backup

This command creates a backup of the memory card contents and saves it in the location you have defined on your computer.

Caution! We recommend a backup before the first reloading of the memory card and then again at regular intervals.

Restore data backup

With this command you can access the previously created backup again and restore it to the memory card.

Format memory card

Caution: Formatting irrevocably deletes the data on a data carrier! Therefore, make sure that you have not selected the wrong data carrier by mistake!

After a further confirmation prompt, the formatting is carried out. Formatting can take a few minutes. If you do not want to format or are not sure, click on No.

Advanced functions

- Play files quieter or louder
- Increase the volume to the limit
- Regularly remind you to back up your data
- Show drives larger than 32 GB
- Always create the file hoerbert.xml for old hoerbert app versions 1.x
- Determine the number of buttons for the hörbert: Change to 1-button or 3-button hörbert.

- Change the software to the new hörbert model (without toggle switch).

Save recordings via microphone, Bluetooth or Internet radio

Before hörbert can store Bluetooth streams, Internet radio or voice recordings via the optional microphone, the hörbert software must first be used to define for which of the coloured buttons the respective recordings are permitted.



Figure 8 - Allow recording types

Allow microphone recording

Select a playlist on which voice recordings should be allowed by clicking on the desired coloured button. Then tick the box **"Allow microphone recordings here"**.

Bluetooth stream recordings

Select the playlist in which Bluetooth streams are to be saved by clicking on the desired coloured button. Then tick the box **"Save Bluetooth recordings here"**.

Attention: Only one playlist can be activated for Bluetooth recordings.

Internet radio station recordings

You can store one or more URLs of Internet radio stations on a playlist.

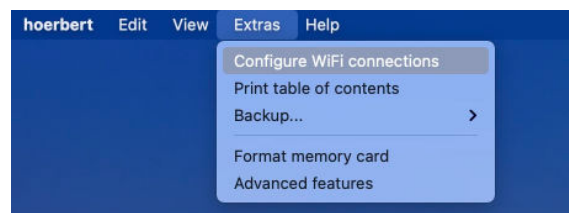 
Internet radio stations on a playlist. See the item Insert Internet Radio URL in these instructions. If you want to record these stations, you must specify for each of the playlists that Internet radio recordings are allowed.

To do this, click on the desired coloured button. **Then tick the box "Allow Internet radio recordings here".**

Settings for Internet radio via WiFi

Setting up WLAN or WiFi settings

In order for hörbert to play Internet radio stations, it must be integrated into your WLAN. For this, hörbert needs the name of your WLAN (called SSID) and the corresponding password. You can find out how to save these access data in hörbert here:



1. Extras -> Configure WiFi connections
2. WiFi settings

Enter the name of your WLAN in the SSID line and the password below it. Click on "Save". Up to 5 WLANs can be set up if hörbert is to be operated at different locations with Internet access.

WiFi settings

SSID:

Passkey:

SSID:

Passkey:

SSID:

Passkey:

SSID:

Passkey:

SSID:

Passkey:

Cancel Save

3. Eject the memory card from the hörbert software and insert it into hörbert.
4. Switch on hörbert and press the SET button. The green light next to the SET button now lights up permanently.
5. Press the orange playlist button on the front of the hörbert until the Playlist button until you hear an acknowledgement tone. (press for about 10 seconds).
6. Exit the SET mode by pressing the SET button again.

Important security note: Between steps 1 and 5, your access data is stored in plain text in a "wifi.ini" file on the memory card. This file is not deleted from the memory card until you read the data into hörbert and save it with the SET key. You can also delete the file from the memory card at any time using Windows Explorer or Finder.

Playback of a microphone recording

In the case of a **microphone recording**, this is also played back immediately a few seconds after recording. It lands directly after the file in which you started the recording. Afterwards, you can always call it up again from this playlist. With the help of the hörbert software, you can also move the recording to another location. See the instructions for the hörbert software at <https://hoerbert.com/anleitungen/hörbert>.

Playback of Internet radio recordings

Recordings from the Internet radio always end up at the end of the playlist in which the URL of the Internet radio station is entered and can be accessed and played back from there with the corresponding coloured hörbert button for this playlist. With the help of the hörbert software, you can also move the recording to another location. See the instructions for the hörbert software at <https://hoerbert.com/anleitungen/hörbert>.

Playback of recordings from Bluetooth streams

Recordings from Bluetooth streams always end up at the end of the playlist that was previously released for Bluetooth recordings. They can then be accessed and played back from there. With the help of the hörbert software, you can also move the recording to another location. See the instructions for the hörbert software at <https://hoerbert.com/anleitungen/hörbert>.